


# How to see each error codes

## ACS Display

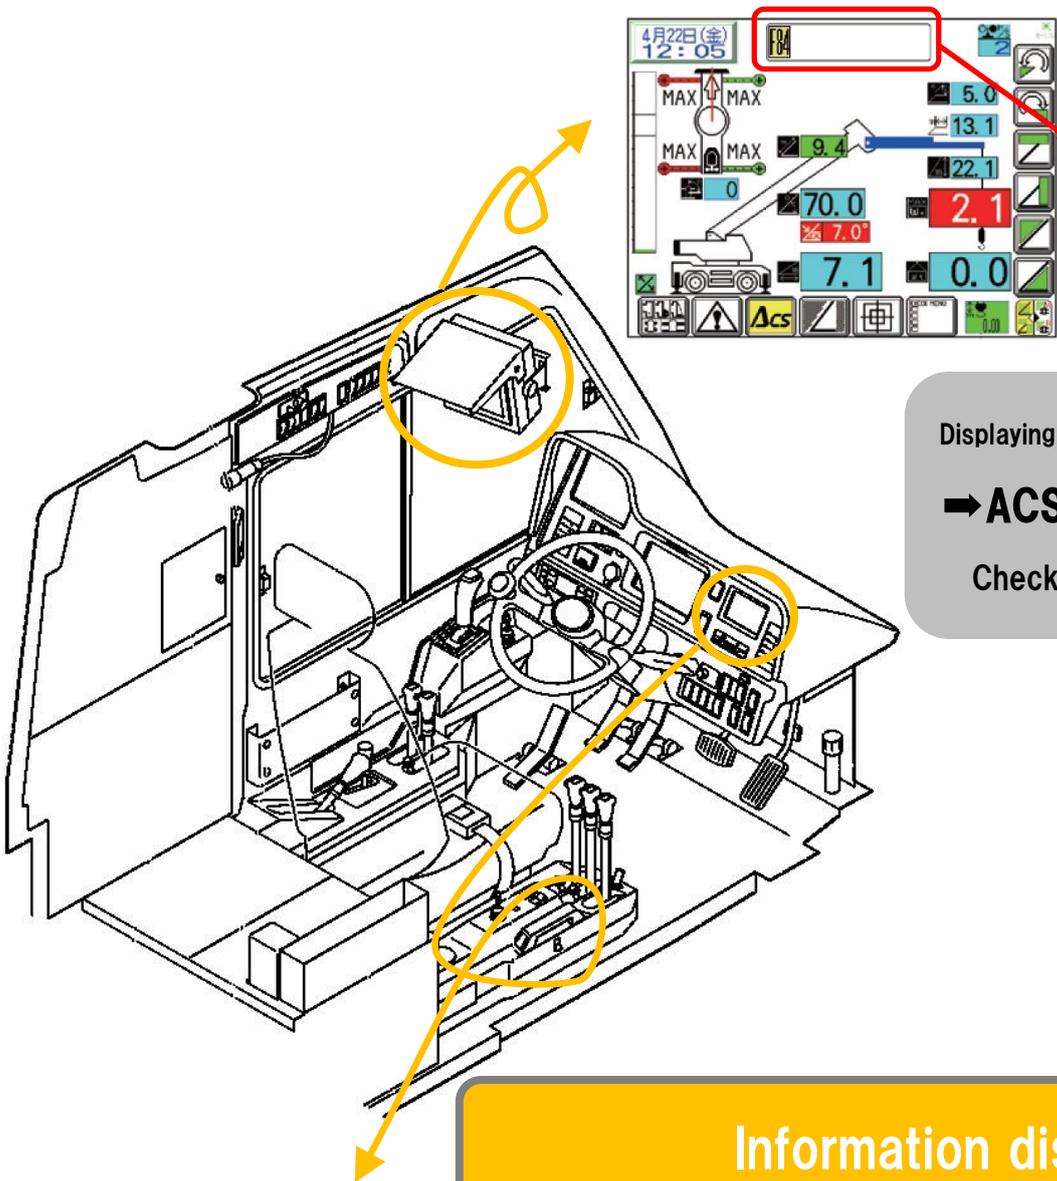

Displaying warning icons or error codes.

➔ **ACS**

Check the ACS page.

## Information display



Engine check lamp  
ON



Engine errors has occurred.

➔ **Engine**

Check the Engine page.

Engine check lamp  
OFF



COR, AT/M, or retarder related errors has occurred.

➔ **COR**

Check the COR page.